


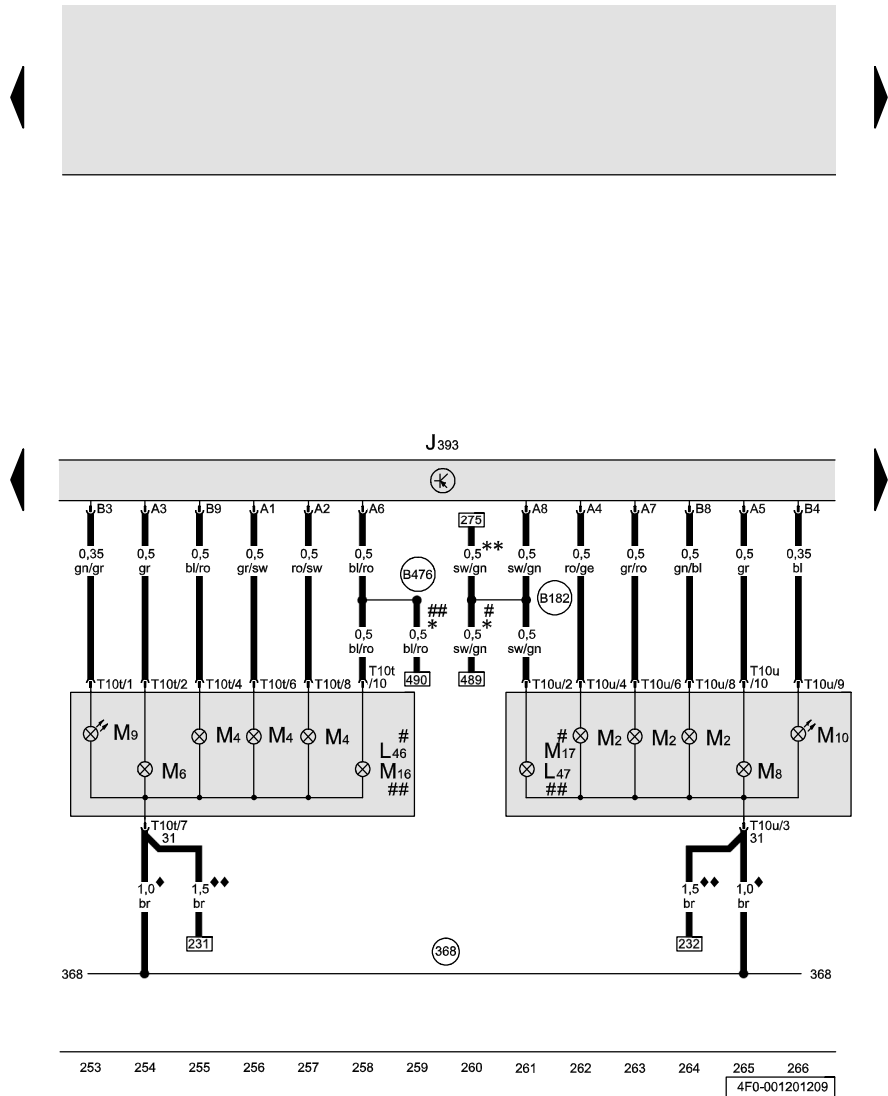
Audi A6

Current Flow Diagram

No. 1 / 20

Convenience system central control unit, left and right tail light, highline, not USA

- J393 - Convenience system central control unit 
- L46 - Rear left fog light bulb
- L47 - Rear right fog light bulb
- M2 - Right tail light bulb
- M4 - Left tail light bulb
- M6 - Rear left turn signal bulb
- M8 - Rear right turn signal bulb
- M9 - Left brake light bulb
- M10 - Right brake light bulb
- M16 - Left reversing light bulb
- M17 - Right reversing light bulb
- T10t - 10-pin connector, black, on left rear fog light
- T10u - 10-pin connector, black, on right rear fog light
- 368 - Earth connection 3, in main wiring harness
- B182 - Connection (RL), in interior wiring harness
- B476 - Connection 12, in main wiring harness
- * - models with automatic gearbox
- ** - USA
- # - not Japan
- ## - only Japan
- ◆ - up to October 2005
- ◆◆ - from November 2005



ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink