4.2 Front Center Armrest, Removing and Installing

Removing


- Remove the front center armrest in the center console. Refer
 - ⇒ "4.3 Front Center Armrest Storage Compartment, Removing and Installing", page 55.
- Remove the bolts -arrows-.
- Disengage and remove center armrest -1-.
- If equipped, disconnect the connector.

Installing

Install in reverse order of removal.

Installation instructions: for example tightening specifications, replacing components. Refer to

⇒ "4.1 Overview - Front Center Armrest", page 54.

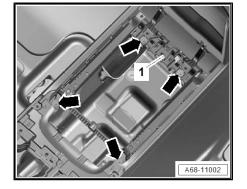

4.3 Front Center Armrest Storage Compartment, Removing and Installing

Special tools and workshop equipment required

- ◆ Trim Removal Wedge 3409mercial purposes, in part or in whole, is not
- ♦ emsted uplear nithoriser by Althi AS Craper Seen of VAS6845 accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Removing

- Fold up the front center armrest.
- Unclip the trim -1- to the center armrest storage compartment from the storage compartment -arrows- using the -3409- or the scraper from the -VAS6845- .
- Remove the front center console insert vent. Refer to ⇒ "3.3.1 Front Center Console Insert Cover, Removing and Installing", page 41.
- Remove the bolts -arrows-.
- Remove the storage compartment -1- from the center console.
- Disconnect the connectors and free up the wiring.
- Remove the multimedia devices. Refer to ⇒ Communication: Rep. Gr. 91; Infotainment System; Component Location Overview - Infotainment System .

Installing

Install in reverse order of removal.

Installation instructions: for example tightening specifications, replacing components. Refer to

⇒ "4.1 Overview - Front Center Armrest", page 54

