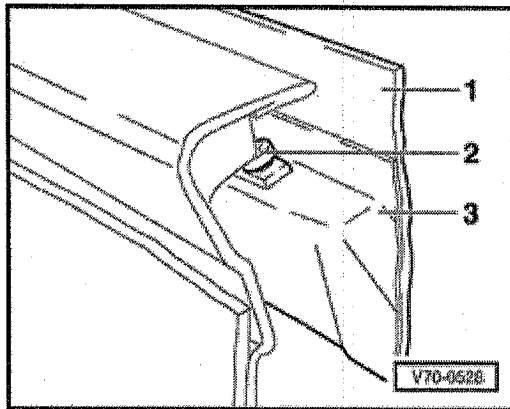


**Fig. 3 Installed position of lock knob**

- ▶ After assembly, locating cam or letter "p" should point toward door window
- ▶ In locked position, knob must be flush with door trim, as shown



**Fig. 4 Door trim panel height adjustment**

1. Window slot strip
2. Adjusting screw
3. Window regulator

Adjust height parallel to outside window slot strip - 1 - .

Adjust door trim panel so it is even with instrument panel at front and to side trim panel at rear.

Height is adjusted by using adjusting screws - 2 -

### **Armrest, removing and installing**

#### **Removing**