


Radio Concert, Symphony, Bose with and without CD Changer

2002 m. y.

Fuse Panel

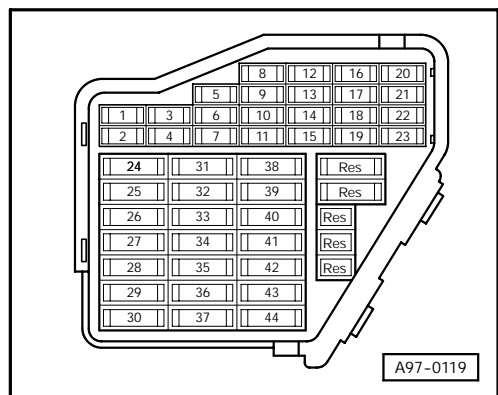



Fuse Colors:

- 30 A - Green
- 25 A - White
- 20 A - Yellow
- 15 A - Blue
- 10 A - Red
- 7,5 A - Brown
- 5 A - Beige

Starting with fuse position 23, fuses in the fuse holder are identified with 223 in the wiring diagram.

Micro Central Electric Panel


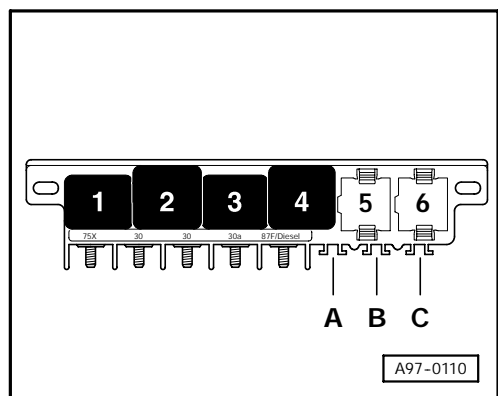


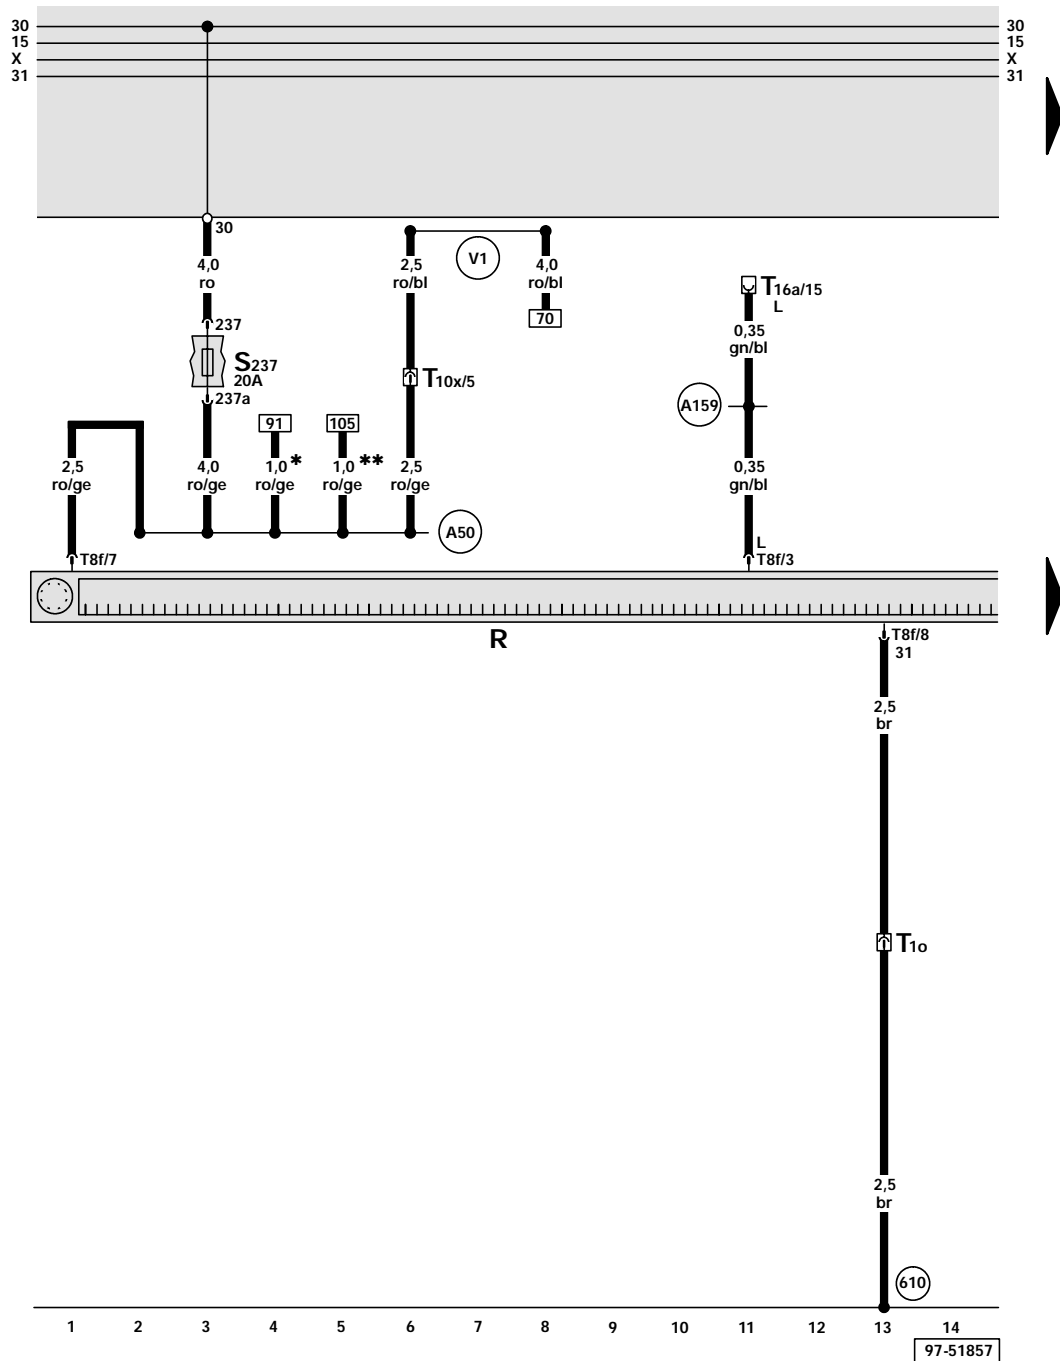


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- R - Radio
- S237 - Fuse 37 in fuse holder
- T1o - Single connector, behind instrument panel, center
- T8f - Connector 8 pin, black, connector radio III
- T10x - Connector 10 pin, green, connector station A pillar, right
- T16a - Connector 16 pin, Data Link Connector (DLC)

- (610) - Ground connection (radio) under center console, front
- (A50) - Plus connection (30as), in instrument panel wiring harness
- (A159) - Connection (L) (in instrument panel wiring harness)
- (V1) - Plus connection (30), in rear speaker wiring harness
- * - sedan
- ** - wagon

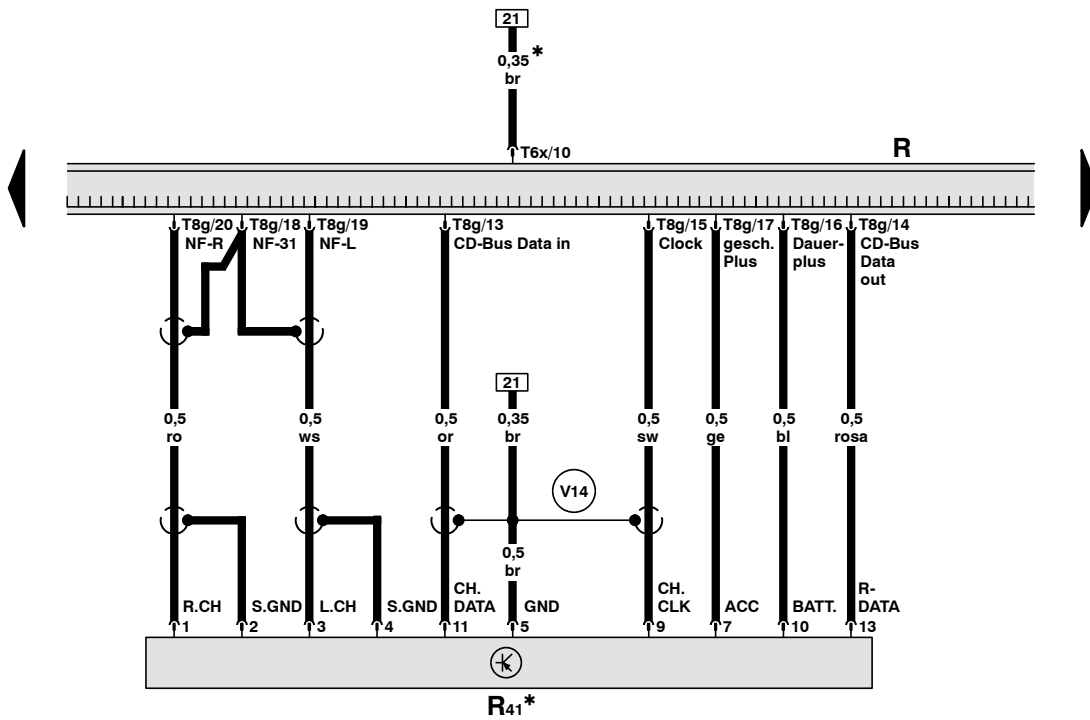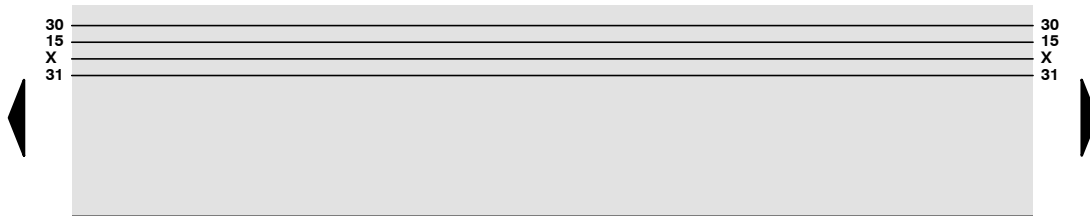


ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = violet
ge = yellow
or = orange



- R - Radio
- R41 - CD Changer Unit
- T6x - Connector 6 pin, green, connector radio I - 2
- T8g - Connector 8 pin, blue, connector radio I - 3

(V14) - Wire connection (shielding), in CD-changer wiring harness



* - Vehicles with CD Changer

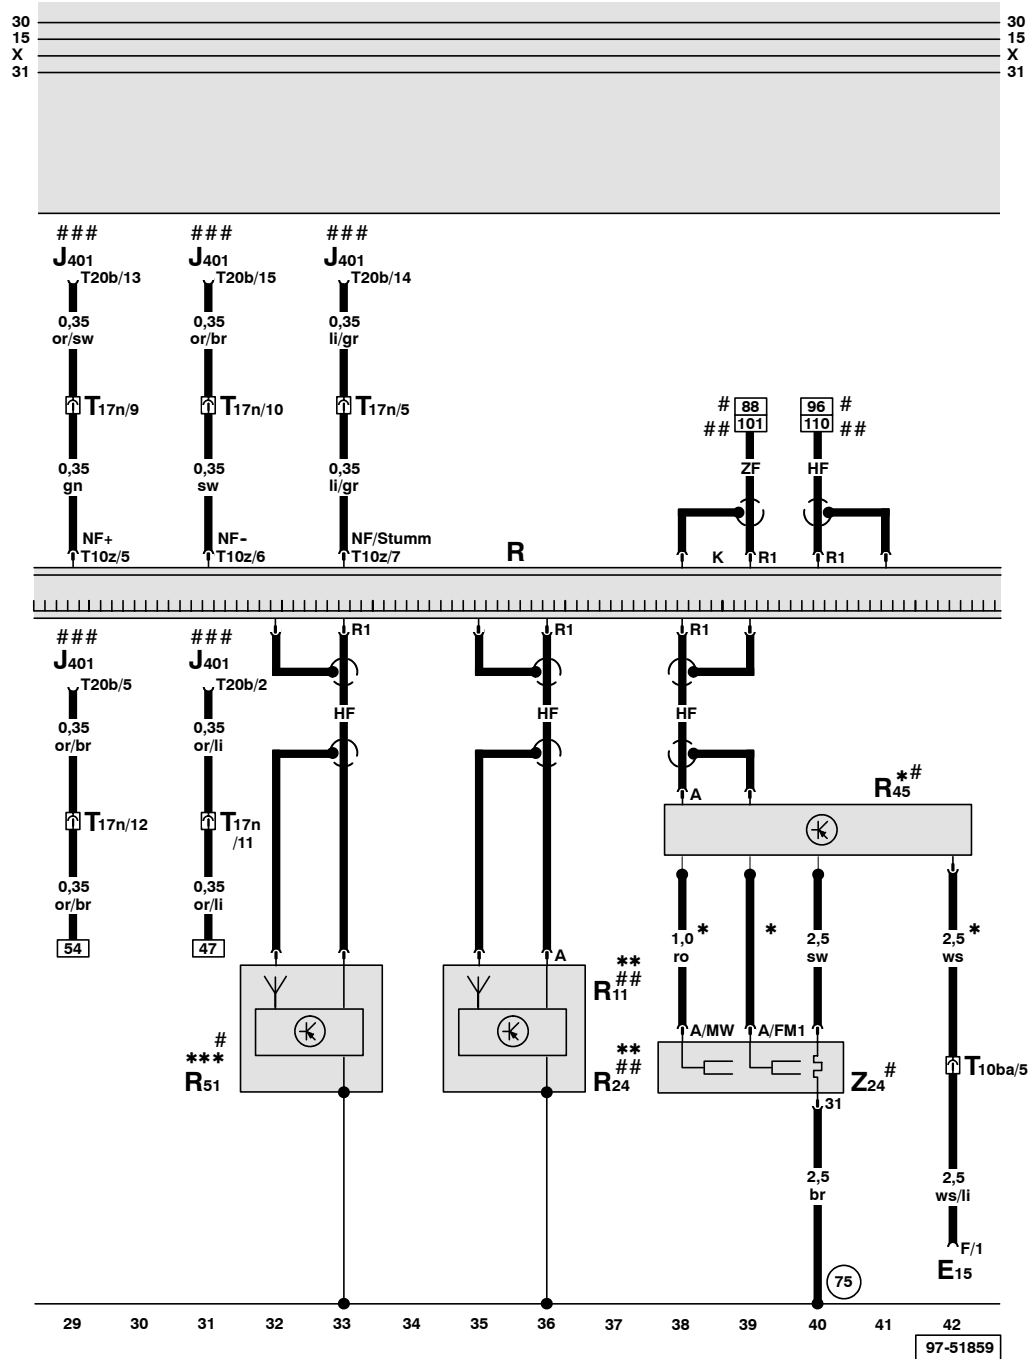

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow
 or = orange

- E15 - Rear Window Defogger Switch
- J401 - Control unit for navigation with CD drive
- R - Radio
- R1 - Antenna Connection
- R11 - Antenna
- R24 - Antenna Amplifier
- R45 - Telephone/Radio Antenna Amplifier
- R51 - Radio/Telephone Antenna
- T10z - Connector 10 pin, red, connector radio IV
- T10ba - Connector 10 pin, blue, connector station A pillar, left
- T17n - Connector 17 pin, brown, connector station A pillar, right
- T20b - Connector 20 pin, black, on control unit for navigation
- Z24 - Rear Window Defogger With Window Antenna

- (75) - Ground connection, on right rear pillar
- * - Rear Window Antenna, Sedan without insulating glass
- ** - Roof Antenna
- *** - Rod Antenna, Sedan with insulating glass
- # - Sedan
- ## - Wagon
- ### - Vehicles with navigation

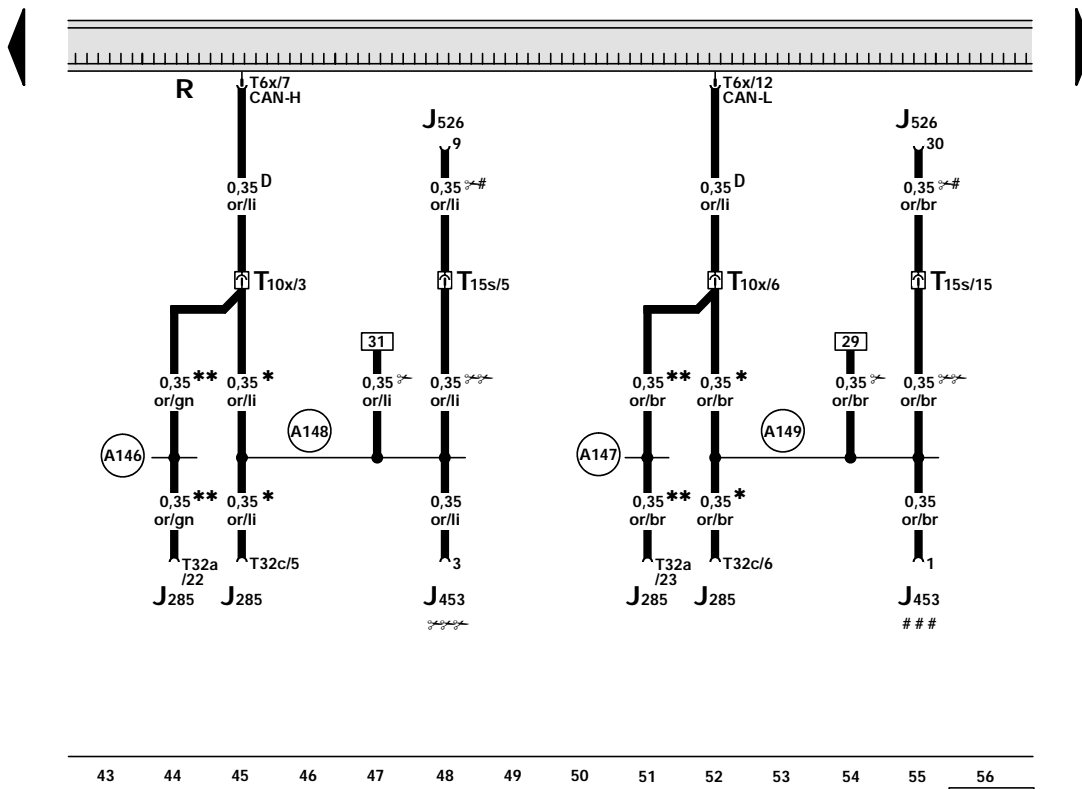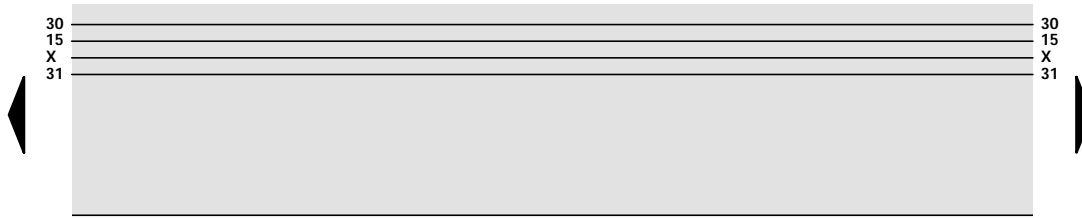


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow
 or = orange

97-52612

- J285 - Control Module with indicator unit in instrument panel insert
- J453 - Control module for multi-function steering wheel
- J526 - Telephone/Telematic Control Module
- R - Radio
- T6x - Connector 6 pin, green, connector radio I - 2
- T10x - Connector 10 pin, green, connector station A pillar, right
- T15s - Connector 15 pin, blue, connector station A pillar, left
- T32a - Connector 32 pin, green, on instrument cluster
- T32c - Connector 32 pin, grey, on instrument cluster

- (A146) - Connection (high bus, comfort), in instrument panel wiring harness
- (A147) - Connection (low bus, comfort), in instrument panel wiring harness
- (A148) - Connection (high bus, navigation), in instrument panel wiring harness
- (A149) - Connection (low bus, navigation), in instrument panel wiring harness



- D - CAN-Bus (Data-Bus)
- * - Vehicles with Auto Check System
- ** - Vehicles without Auto Check System
- # - Vehicles with navigation
- ## - Vehicles with Telematic, Telephone
- ### - Vehicles with multi-function steering wheel

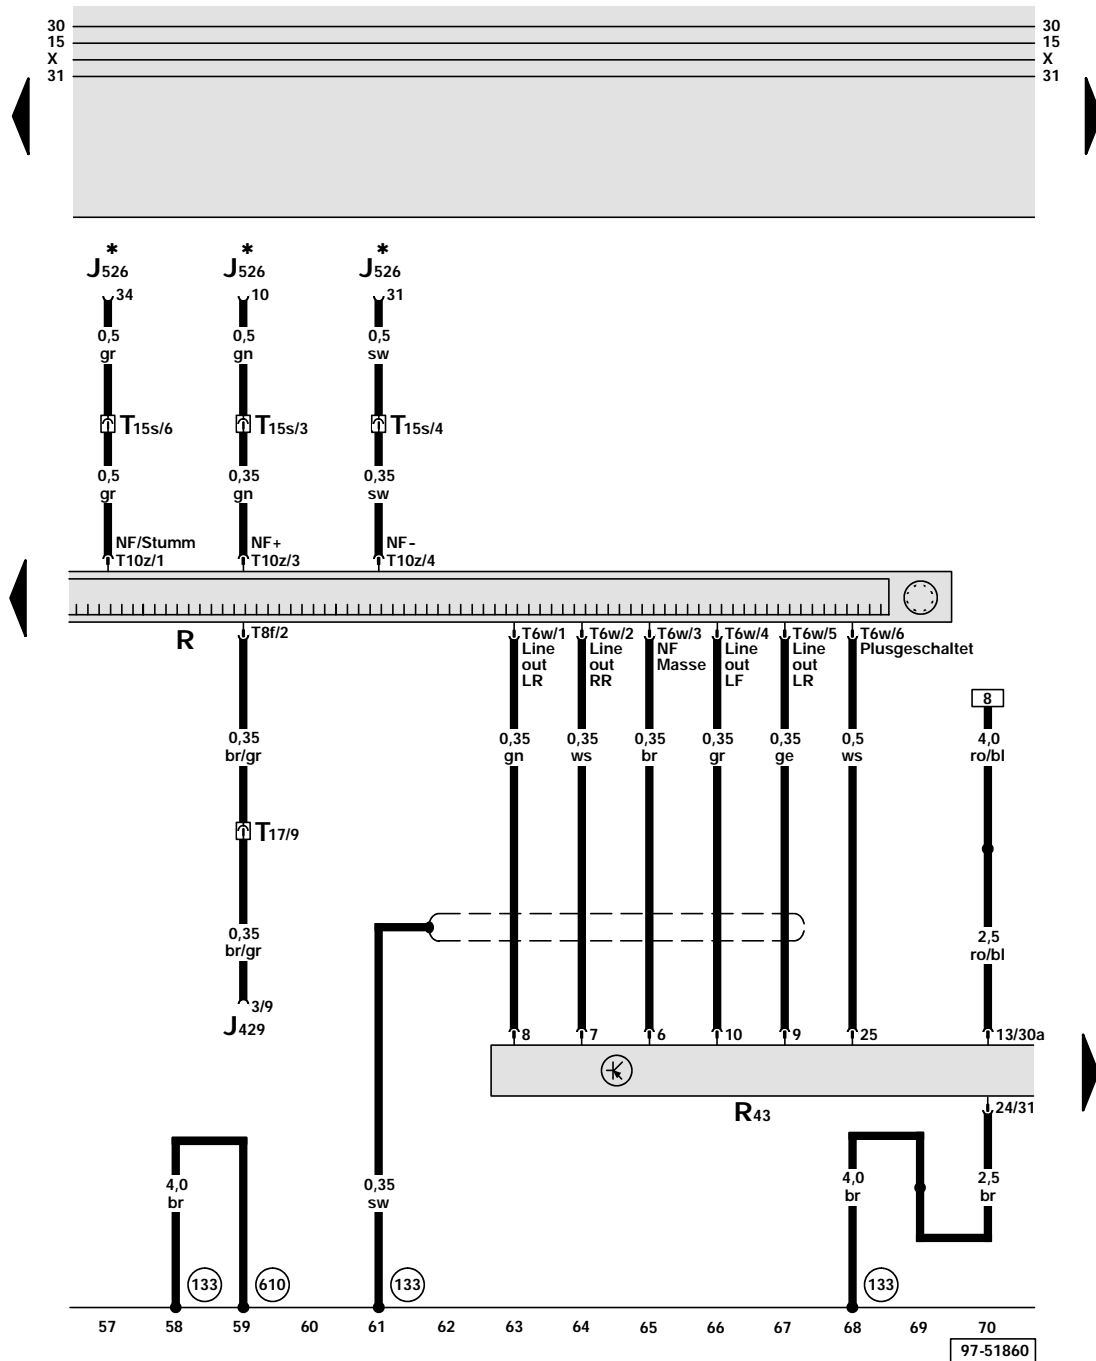

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- J429 - Control module for central locking
- J526 - Telephone/Telematic Control Module
- R - Radio
- R43 - Right Rear Woofer/Amplifier
- T6w - Connector 6 pin, yellow, connector radio I - 1
- T8f - Connector 8 pin, black, connector radio III
- T10z - Connector 10 pin, red, connector radio IV
- T15s - Connector 15 pin, blue, connector station A pillar, left
- T17 - Connector 17 pin, orange, connector station A pillar, right



- (133) - Ground connection, in speaker wiring harness
- (610) - Ground connection (radio) under center console, front
- * - Vehicles with Telematic, Telephone

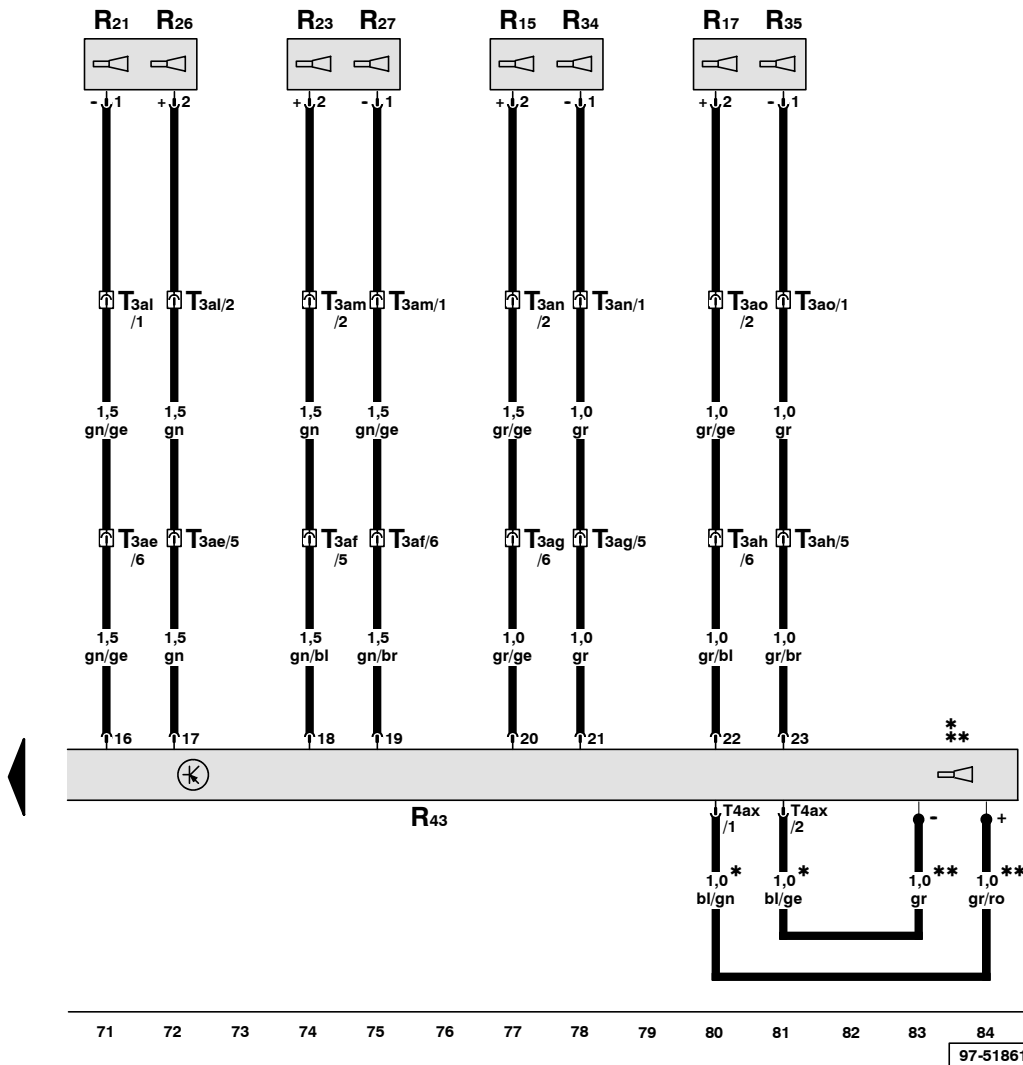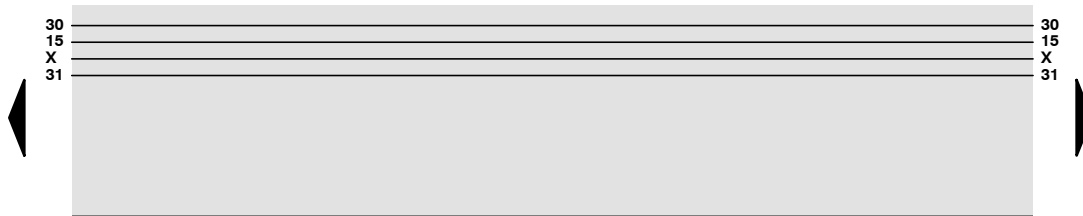

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- R15 - Left Rear Woofer
- R17 - Right Rear Woofer
- R21 - Left Front Woofer
- R23 - Right Front Woofer
- R26 - Left Front Midrange Speaker
- R27 - Right Front Midrange Speaker
- R34 - Left Rear Midrange Speaker
- R35 - Right Rear Midrange Speaker
- R43 - Right Rear Woofer/Amplifier
- T3ae - Connector 3 pin, brown, connector station A pillar, left
- T3af - Connector 3 pin, brown, connector station A pillar, right
- T3ag - Connector 3 pin, blue, in B pillar left
- T3ah - Connector 3 pin, blue, in B pillar right



- T3al - Connector 3 pin, black, in driver's door
- T3am - Connector 3 pin, black, in passenger's door
- T3an - Connector 3 pin, black, in left rear door
- T3ao - Connector 3 pin, black, in right rear door
- T4ax - Connector 4 pin, on Woofer/Amplifier
- * - Woofer bassbox, sedan
- ** - Woofer bassbox, wagon

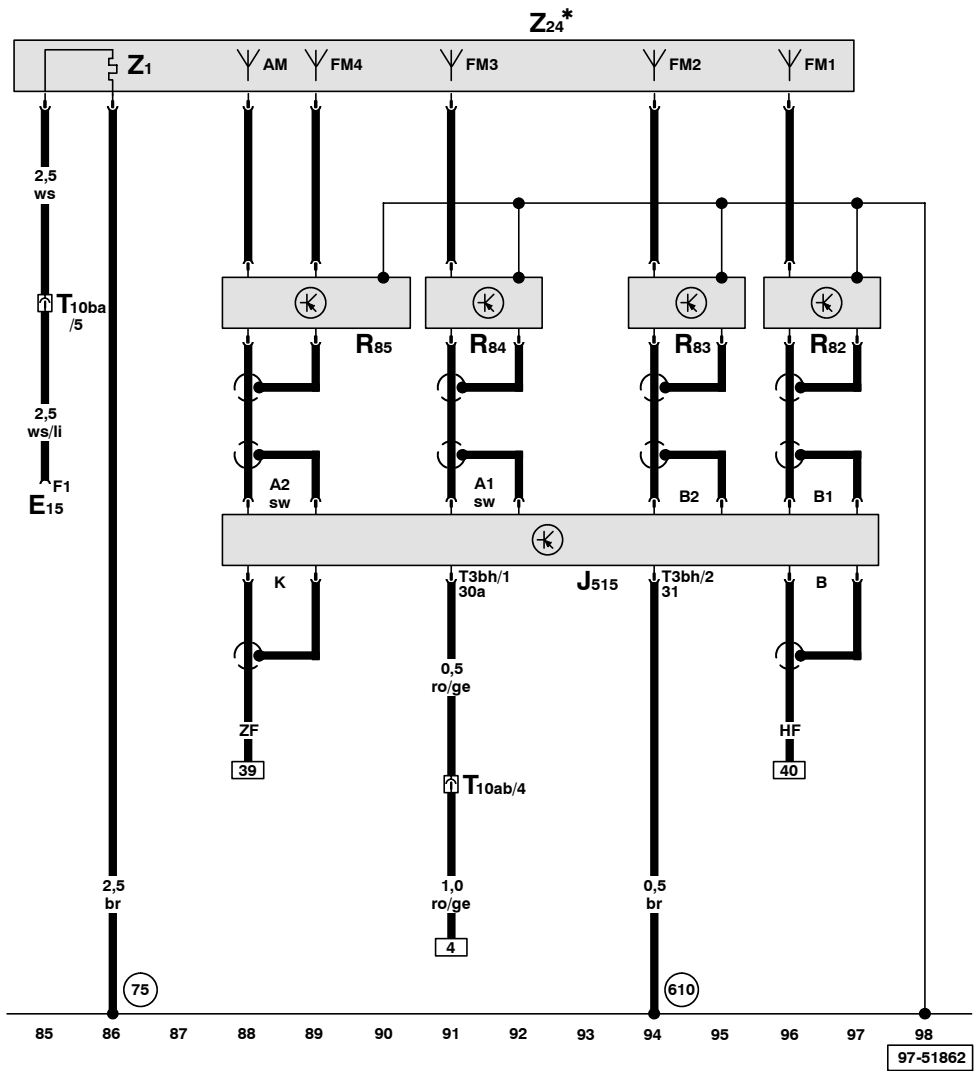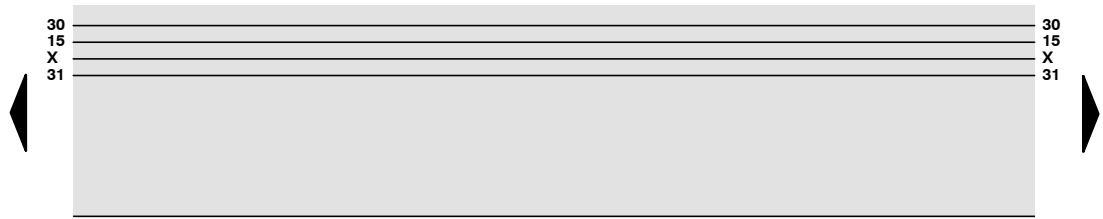

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- E15 - Rear Window Defogger Switch
- J515 - Control unit for aerial selection (aerial diversity function)
- R82 - TV Antenna Amplifier 1
- R83 - TV Antenna Amplifier 2
- R84 - TV Antenna Amplifier 3
- R85 - TV Antenna Amplifier 4
- T3bh - Connector 3 pin, black, on Control unit for aerial selection (aerial diversity function)
- T10ab - Connector 10 pin, violet, connector station A pillar, right
- T10ba - Connector 10 pin, blue, connector station A pillar, left
- Z1 - Rear Window Defogger/Heat Element
- Z24 - Rear Window Defogger With Window Antenna

- (75) - Ground connection, on right rear pillar
- (610) - Ground connection (radio) under center console, front
- * - only sedan

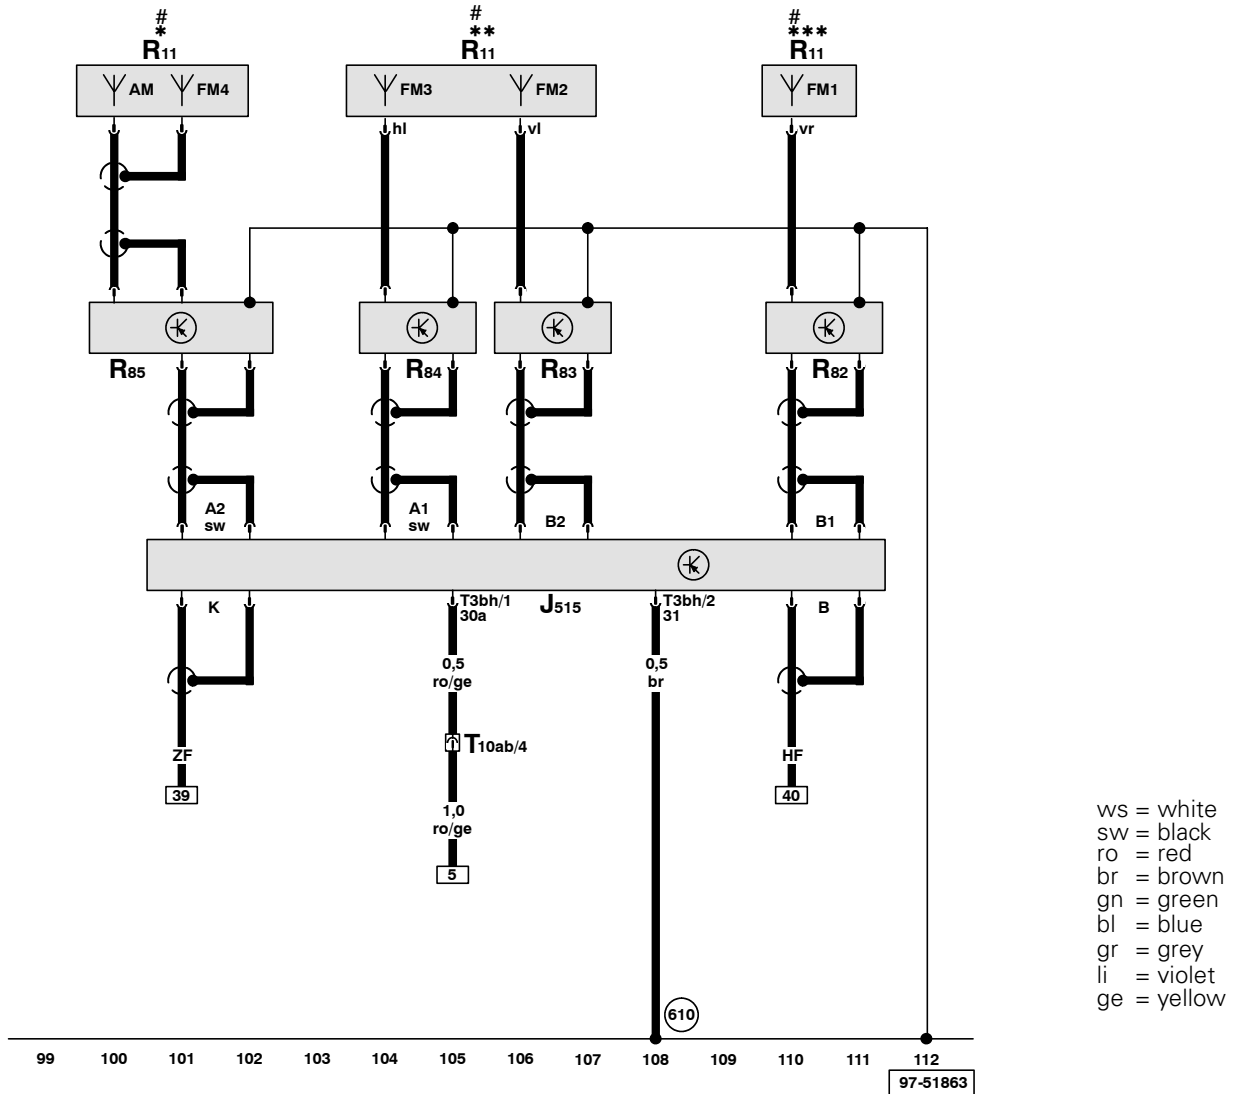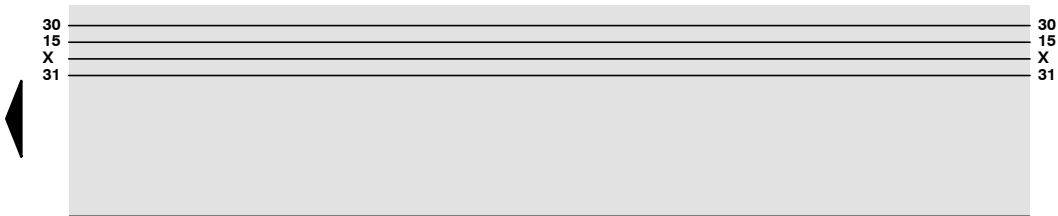

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- J515 - Control unit for aerial selection (aerial diversity function)
- R11 - Antenna
- R82 - TV Antenna Amplifier 1
- R83 - TV Antenna Amplifier 2
- R84 - TV Antenna Amplifier 3
- R85 - TV Antenna Amplifier 4
- T3bh - Connector 3 pin, black, on Control unit for aerial selection (aerial diversity function)
- T10ab - Connector 10 pin, violet, connector station A pillar, right

(610) - Ground connection (radio) under center console, front

- * - Roof Antenna
- ** - Window rear left
- *** - Window rear right
- # - only wagon