

Audi Technical Updates
Oil Level and Oil Consumption Procedures

Oil Level Checking, Refer to ELSA

Caution! 

During engine oil service work DO NOT use the MMI or DIS reading to verify the engine oil level, always verify the engine oil level using special tool T40178 as outlined in procedure on the next slide!

Note! 


Once the hood is opened, the Dynamic measurement is erased and the MMI or DIS will always show the oil level at maximum until a new Dynamic measurement is available ~60 miles (100 km)

Oil Level Checking, Refer to ELSA

Oil Level, Checking with Oil Level Display Tester

Note

- Minimum engine oil temperature 140F (60C)
- Vehicle must be in level position
- After stopping engine, wait a few minutes to allow oil to flow back into oil pan.

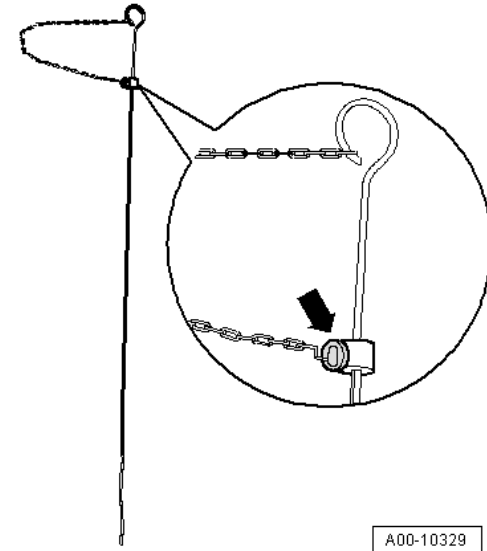

A00-10329

Special tools and workshop equipment required

- Oil Level Display Tester –T40178-

Engine	Adjusting value on the upper adjusting ring	Minimum oil level on the lower scale	Maximum oil level on the lower scale
2.0 TFSI	39	0	24
3.0L TFSI and 3.2L FSI	132	0	13

Oil Consumption, Refer to ELSA

Follow TSB: 2018550

- Only Shop foremen and technicians who have completed the Web Based Training - *920104 Oil Consumption Testing*, will be reimbursed for oil consumption test.
- Only one oil consumption test will be reimbursed under Warranty within the next 25,000 miles (40,000 km).
- If the vehicle is within Warranty(s), **you must obtain authorization** from the Audi Technical Assistance Center before proceeding to Part 1 of the test.
- Contact Audi Technical Assistance Center (TAC) with **all** test results.
- Shop equipment required: Digital scale CPWP 15, Automatic Shipment AT-317

Thank you.