

Account

Vehicle

Help

Search

Contact

AutoZone Community

Exit

Your Vehicle: 2010 Audi Q7 Quattro (4LB) V6-3.0L DSL Turbo (CATA)



SAVE \$25
instantly on 4 tires!

tirebuyer.com

SAVE NOW >

SAVE \$25
instantly on 4 tires!

tirebuyer.com

SAVE NOW >

[Vehicle](#) » [Accessories and Optional Equipment](#) » [Towing / Trailer System](#) » [Diagrams](#) » [Electrical Diagrams](#) » [Trailer Coupling, from MY 2007](#) » [Diagram 2/2 \(Tracks 1-14\)](#)


Diagram 2/2 (Tracks 1-14)

IMPORTANT NOTE:

This manufacturer uses "Track" style wiring diagrams.

For information on how to use these diagrams effectively, please refer to Diagram Information and Instructions. [See: Diagrams\Diagram Information and Instructions](#)

Towing Recognition Control Module, Fuses

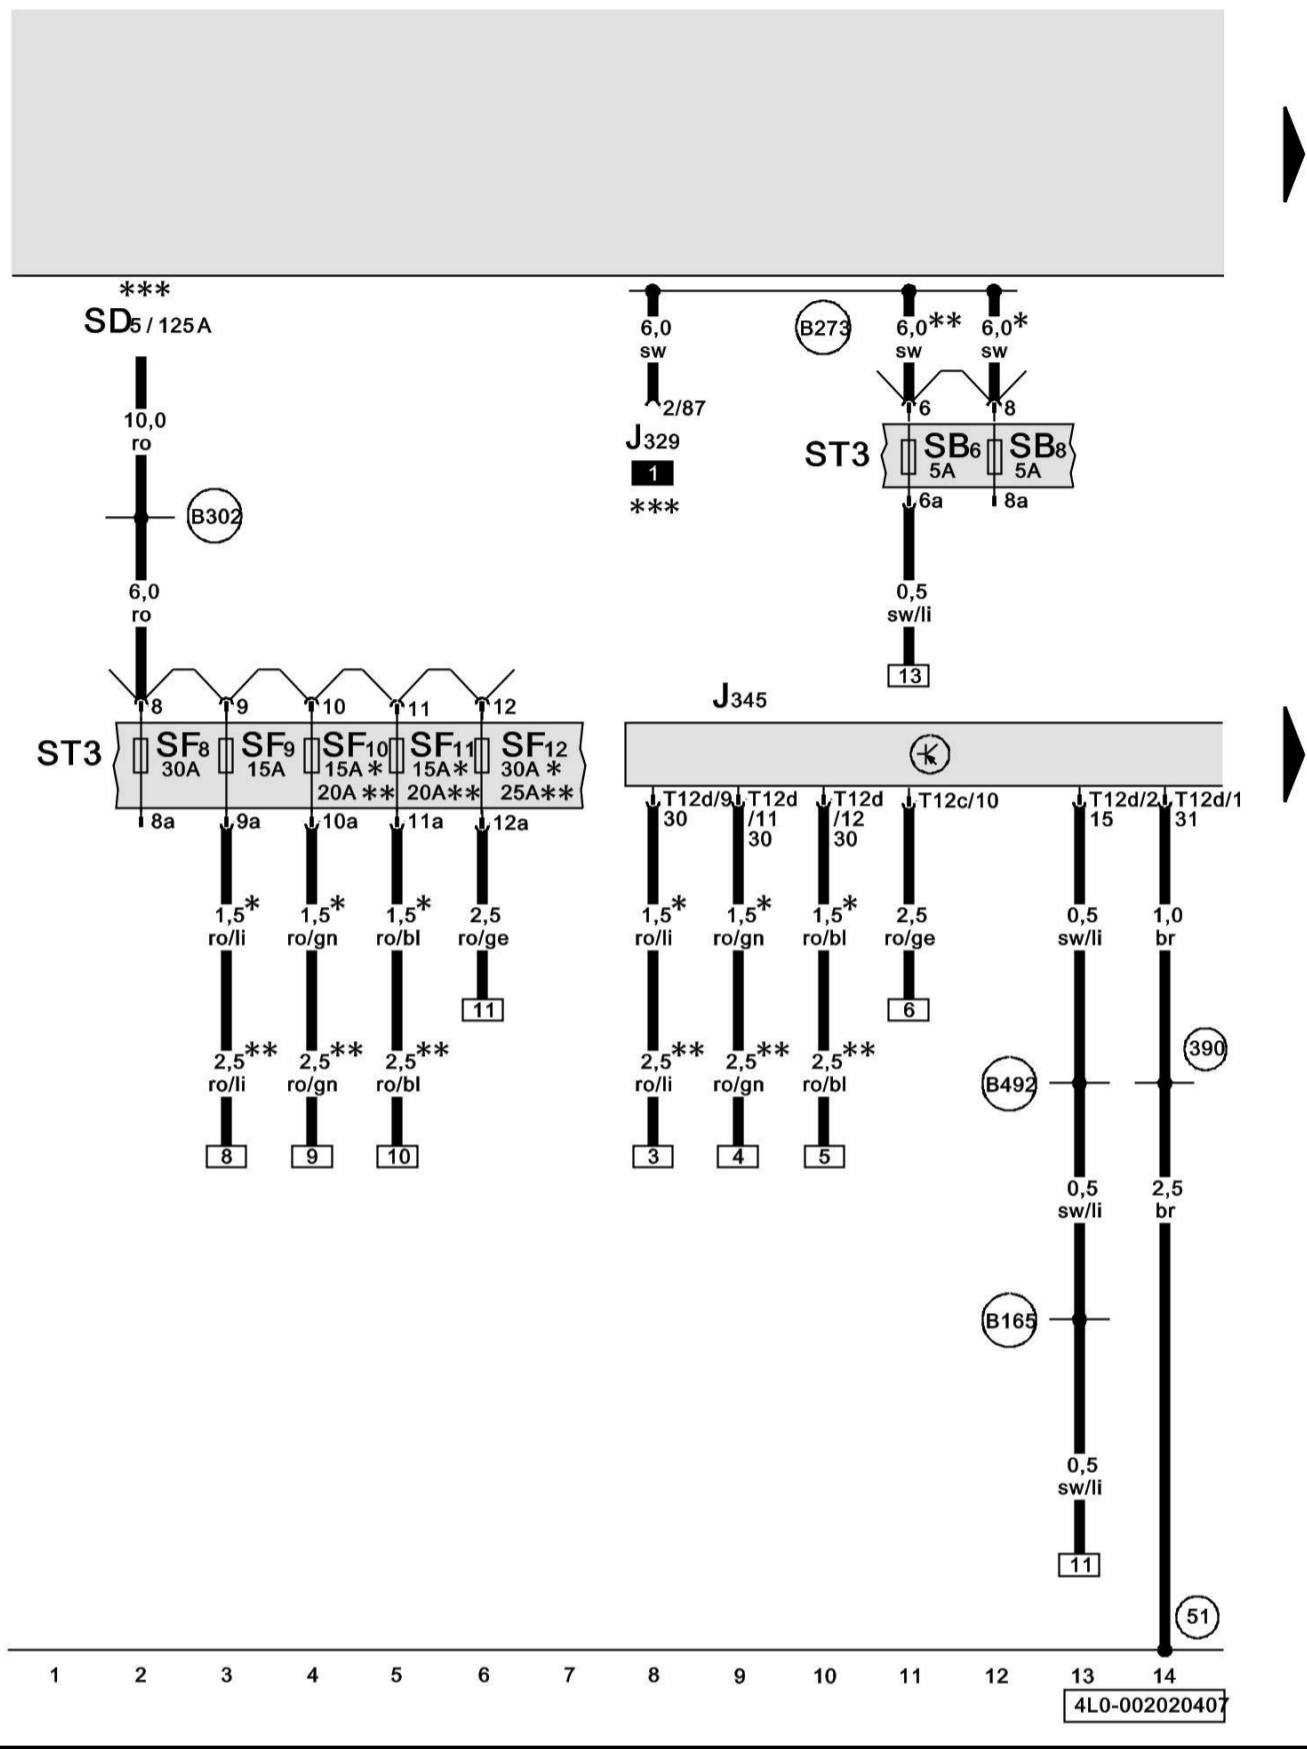

Zoom

Sized for Print

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink

- J329** - Power Supply Relay (terminal 15) [See: Maintenance\Fuses and Circuit Breakers\Relay Box\Locations\Overview of Relays](#)
- J345** - Towing Recognition Control Module [See: Locations\Overview Of Control Modules](#)
- SB6** - Fuse 6 (on fuse panel B)

- SB8** - Fuse 8 (on fuse panel B)
- SD5** - Fuse 5 (on fuse panel D)
- SF8** - Fuse 8 (on fuse panel F)
- SF9** - Fuse 9 (on fuse panel F)
- SF10** - Fuse 10 (on fuse panel F)
- SF11** - Fuse 11 (on fuse panel F)
- SF12** - Fuse 12 (on fuse panel F)
- T12c** - 12-Pin Connector, blue, on towing recognition control module
- T12d** - 12-Pin Connector, red, on towing recognition control module
- (51)** - Ground Connection (in luggage compartment, right) [See: Power and Ground Distribution\Grounding Point\Locations](#)
- (390)** - Ground Connection 25 (in main wiring harness)
- (B165)** - Plus Connection 2 (15) (in interior wiring harness)
- (B273)** - Plus Connection (15) (in main wiring harness)
- (B302)** - Plus Connection 6 (30) (in main wiring harness)
- (B492)** - Plus Connection 3 (15) (in interior wiring harness)
- *** - Through May 2007
- **** - from June 2007
- ***** - Relay and fuse carrier below driver's seat
- #** - Not for electrical fold-in trailer coupling

Next [See: Diagram 2/3 \(Tracks 15-28\)](#)

[Account](#) | [Vehicle](#) | [Help](#) | [Contact](#) | [AutoZone Community](#) | [Exit](#)

© 2015 ALLDATA, LLC. All Rights Reserved. [Trademarks](#) | [Privacy Policy](#) | [Terms and Conditions](#)